
Aspherix® Installation Instructions

Release 6.6

DCS Computing

Jun 26, 2025

Contents

1	Prerequisites	2
2	Screencasts	3
3	Installation	3
4	Uninstallation	11
5	Installation of Salome	12
6	Text based installation	13
7	Testing your installation	15
8	Upgrading to a newer version of Aspherix®	17
9	License management	18
9.1	Online license server	18
9.2	In-house license server	18
10	Troubleshooting	19

Preface

This document will walk you through the installation process of Aspherix® GUI and Solver on Microsoft Windows and Linux.

1 Prerequisites

Aspherix® is supported for the following operating systems:

- Windows: Windows 10, 11
- Linux: CentOS Stream 9, Rocky Linux 9, Red Hat 9 or newer, Ubuntu 20.04 or newer, Suse Enterprise 12 or 15, Suse tumbleweed, Amazon Linux 2023 Most other modern Linux systems with glibc version 2.28 or higher can be used as well, but without warranty. For GUI usage, OpenGL 3.2 or newer is required

Special cases:

- Windows Server 2019 & 2022: OpenGL 3.2 is needed
- Centos Stream 8: Aspherix® GUI support cannot be guaranteed
- Windows Subsystem for Linux: Aspherix® GUI support cannot be guaranteed

Recommended hardware: Quad or Octo Core processor, 16 GB RAM, screen resolution 1920 x 1080

Minimal hardware requirements: Dual or Quad Core processor, 4GB RAM, screen resolution 1280 x 720.

On Linux systems make sure that MPI is installed on the machine you want to run Aspherix® on. The installed version has to support MPI-3 standard (e.g., OpenMPI 1.8 or MPICH v3.0). Under Ubuntu, MPI can be installed by the following command:

```
sudo apt install openmpi-bin
```

On CentOS/Red Hat, the following command can be used:

```
sudo yum install openmpi
```

Note that both commands require administrator privileges.

On Windows systems, Microsoft MPI will be installed during the Aspherix® installation procedure. If a more recent version of Microsoft MPI is found during the installation, it will not be changed, older versions can be updated.

During the installation process on Windows also Microsoft Visual C++ Redistributables are installed automatically. In case they have been installed before, please select the option “Repair”.

For using the API of Aspherix® Solver cmake is required (minimal version: cmake 3.9).

The operating system has to be up to date and a 64 bit architecture is required.

When using an online license server, port 5053 and a second port, which is mentioned in the license file, need to be open. For the correct installation of an *inhouse license server* please follow the instructions shipped with the server application or contact your IT department.

On Ubuntu 24.04 the following packages are required:

```
libxcb-xinput0  
libxcb-cursor-dev  
libxcb-xinerama0
```

If they are not yet installed already, this can be done with the following command:

```
sudo apt install libxcb-xinput0 libxcb-cursor-dev libxcb-xinerama0
```

2 Screenshots

Screenshots for the installation and getting started can be found here:


<https://www.aspherix-dem.com/installation-instructions/>

3 Installation


The installation can be launched from a file browser or from a shell.

Note: Under Linux, it may be necessary to change the file permissions of the installer to make it executable. This can be achieved by the shell command `chmod a+x path/to/installer/file`

Under Windows, a security warning might pop up - click “run” to continue installation. This starting page is displayed, click “Next” to continue:

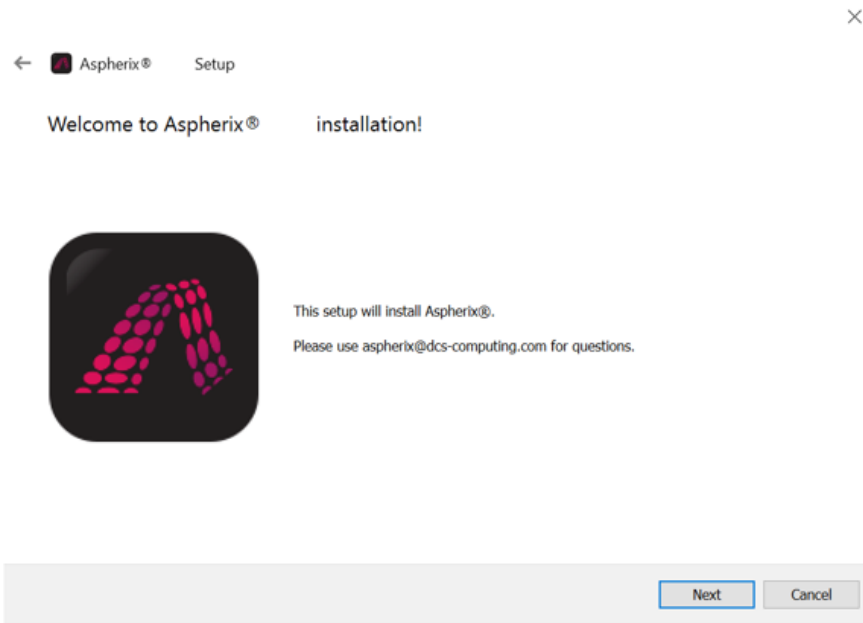


Next, you are asked to specify the installation folder for Aspherix®.

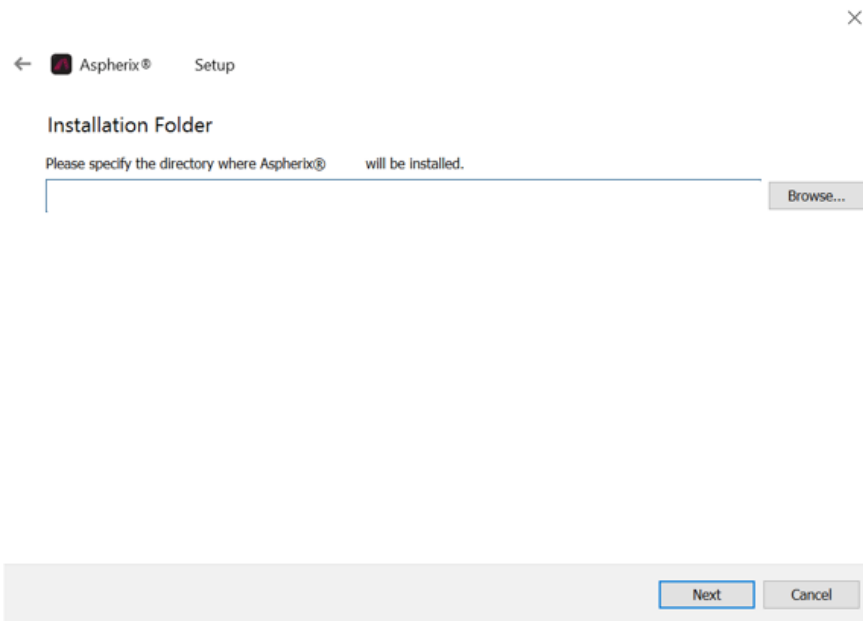

Under Windows, a location in your user directory is proposed.

Under Linux, the installer proposes a destination in your home directory if started as user, and a location in /opt if started with root privileges.

After choosing a destination folder, the installer options dialogue appears.

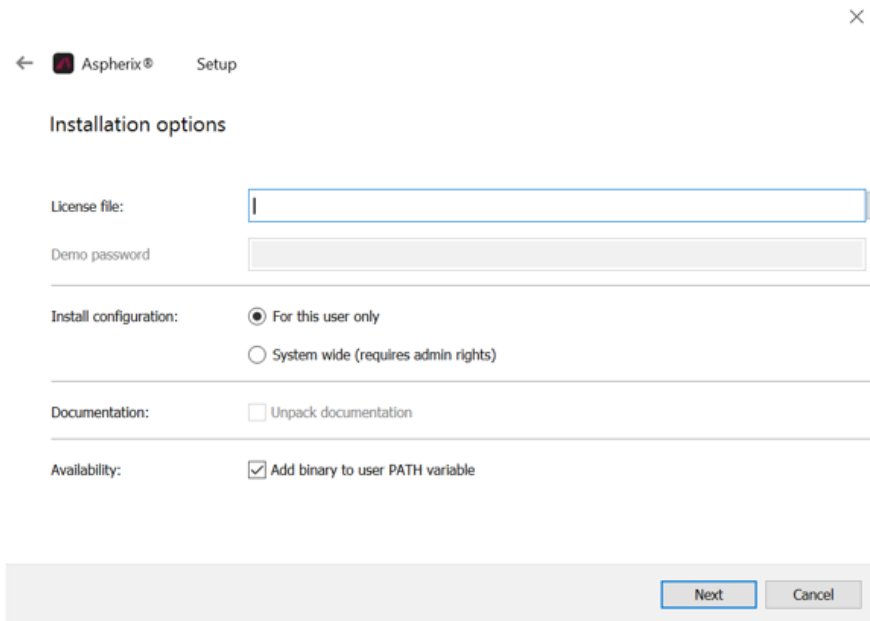

← Aspherix® Setup

Installation options

License file:


Demo password:

Install configuration: ☒ For this user only
☐ System wide (requires admin rights)

Documentation: ☐ Unpack documentation

Availability: ☒ Add binary to user PATH variable

Next Cancel

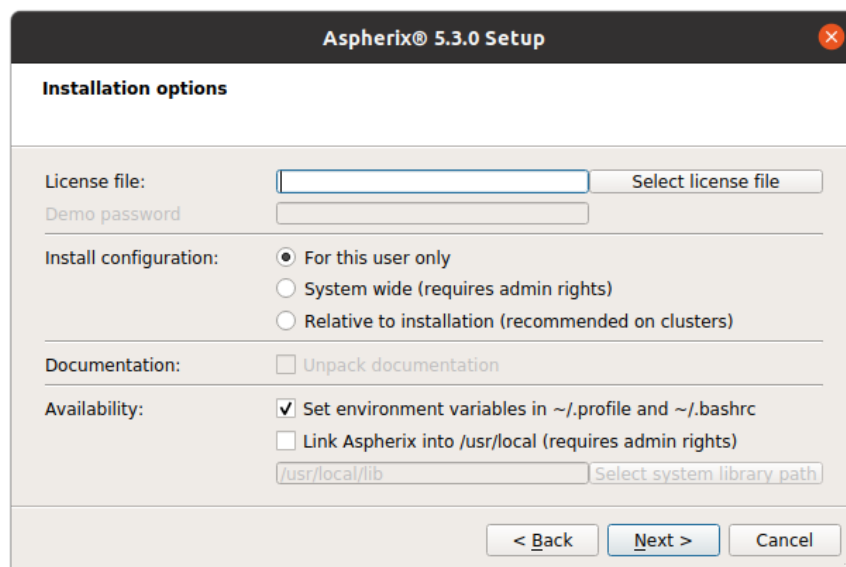

Aspherix® 5.3.0 Setup

Installation options

License file: Select license file

Demo password:

Install configuration: ☒ For this user only
☐ System wide (requires admin rights)
☐ Relative to installation (recommended on clusters)

Documentation: ☐ Unpack documentation


Availability: ☒ Set environment variables in ~/.profile and ~/.bashrc
☐ Link Aspherix into /usr/local (requires admin rights)
 Select system library path

< Back Next > Cancel

A license file is required to install Aspherix®, you should have received one. For demo versions, a password is also required. If you lack any of these, please contact your IT or mail aspherix@dcs-computing.com. Next, choose if you wish to install Aspherix® for all users on the system (requires root privileges) just for this user, or (particularly interesting for the installation on clusters) “relative to installation”. For a system-wide installation it is recommended to check the “Link Aspherix into /usr” (Linux) or “Add binary to user PATH” (Windows) tickbox, so a system-wide symlink becomes available. When choosing the install option “relative to installation” the user does not need access to any particular paths as for example /etc, the configuration file is written to the share/aspherix folder, relative to the local installation.

Note that the “Unpack documentation” checkbox only becomes available once you enter a valid license file.

Please do not uncheck the option “Unpack documentation”, otherwise it will not be automatically available after the installation.

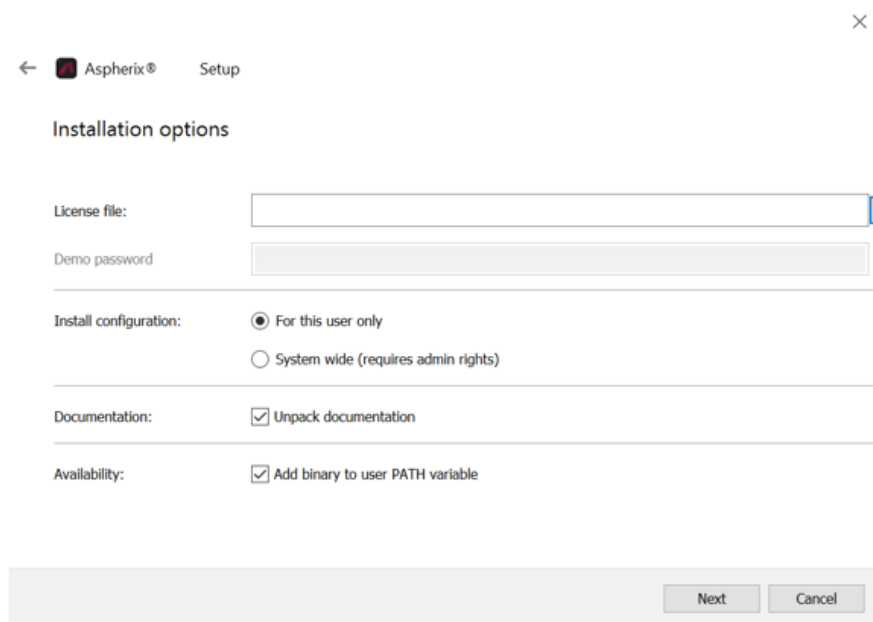

Note: If you do not have a valid license file available during installation, or if the license cannot connect to the license server you can unpack the documentation any time running *aspherix -re* from the command line. Alternatively, you can repeat the documentation extraction from the Aspherix-GUI. Go to **File > Options** and, in the appearing dialog, select **Extract documentation**.

Note: When choosing the bashrc option in the Availability section under Linux a new entry is added to the bashrc file. When uninstalling Aspherix® at a later time the bashrc file is reset to its state before the Aspherix® installation. Changes that are made after this time might be lost!


If none of the options in the Availability section is selected in Linux, the following block of variables can be added to your bashrc in Linux:

```
export PATH=$PATH:INSTALLATION_PATH/Aspherix-6.6.0/bin
export LD_LIBRARY_PATH=$LD_LIBRARY_PATH:INSTALLATION_PATH/Aspherix-6.6.0/
→lib
export LIBRARY_PATH=$LIBRARY_PATH:INSTALLATION_PATH/Aspherix-6.6.0/lib
export C_INCLUDE_PATH=$C_INCLUDE_PATH:INSTALLATION_PATH/Aspherix-6.6.0/
→include/aspherix
export CXX_INCLUDE_PATH=$CXX_INCLUDE_PATH:INSTALLATION_PATH/Aspherix-6.6.
→0/include/aspherix
```



where INSTALLATION_PATH has to be replaced by your installation path.

Both in Windows and Linux, Aspherix® Solver can be launched from within the installation folder (INSTALLATION_PATH/Aspherix-6.6.0/bin) at any time.


Next, you can choose which components to install. Please note that all components can be installed, but only those for which a valid license is found can be used. With a pure Aspherix® Solver / HPC license it is possible to install GUI and Calibration as well but neither of the components will be functional. The Windows installer offers the possibility to install Microsoft MPI, on Linux MPI must be installed by the user. Other offered third party components are ParaView and the ParaView macros. The latter can be used with the distributed ParaView or a custom ParaView installation (ParaView 5.8.0 or newer is required) and they help with the automated visualization of the simulation results (please see tutorials for postprocessing in Aspherix® Solver documentation).

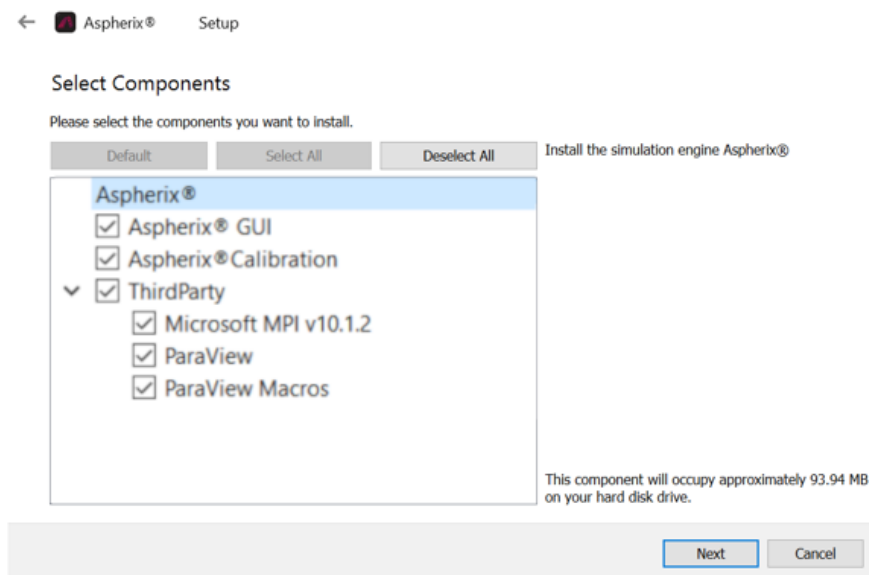


To continue with the installation, it is necessary to accept the Open Source License Agreement and the End User License Agreement:

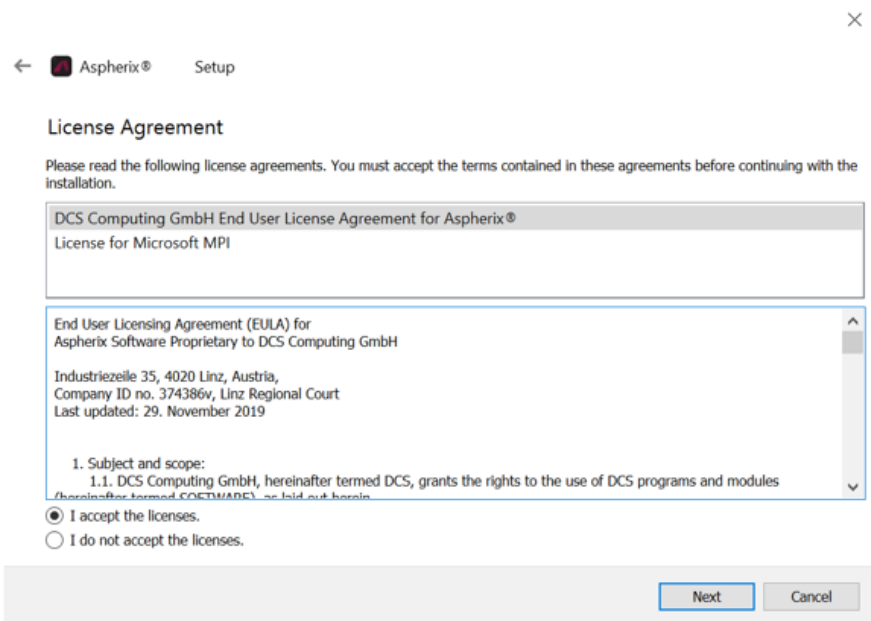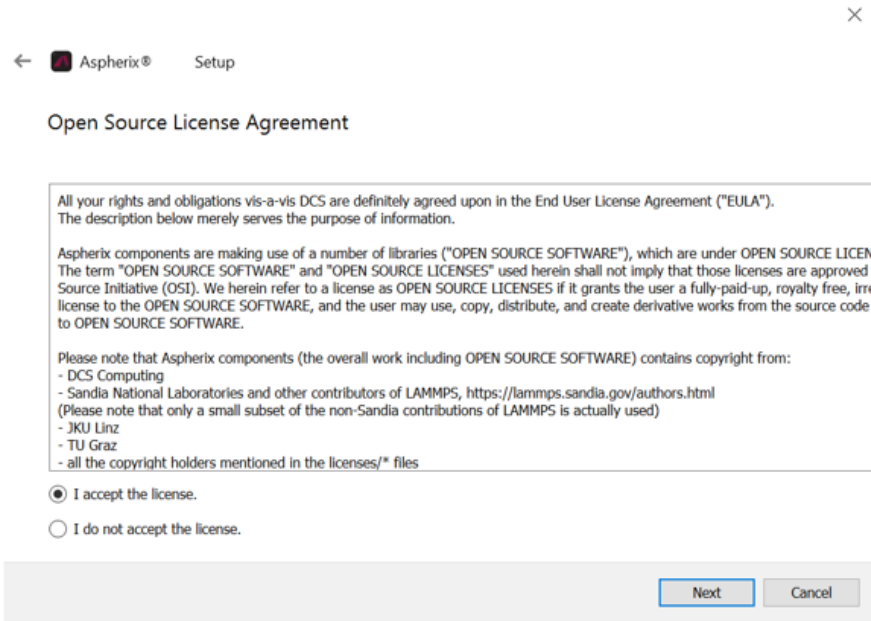


Under Windows, it is possible to create a start menu entry:

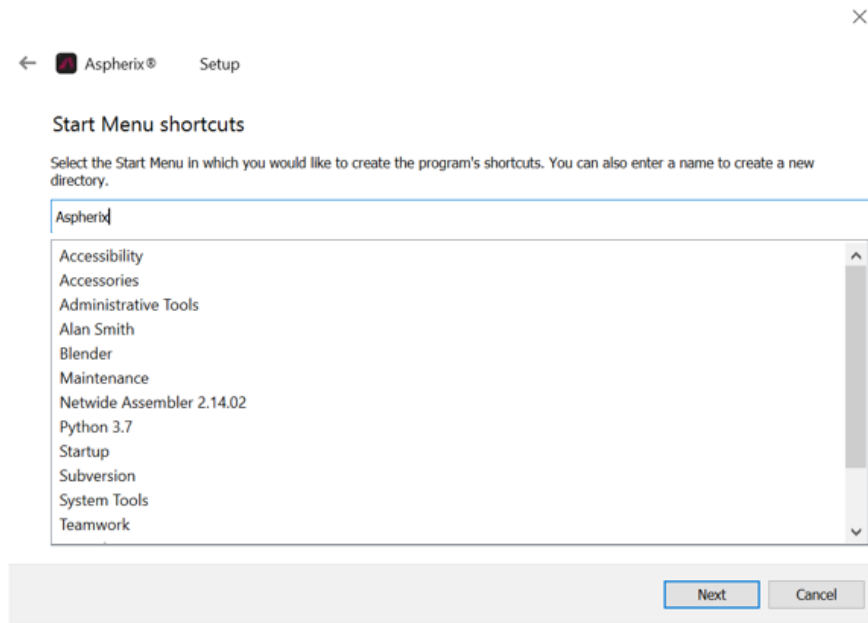


Now everything is set up and the installation will be performed when clicking the “Install” button.

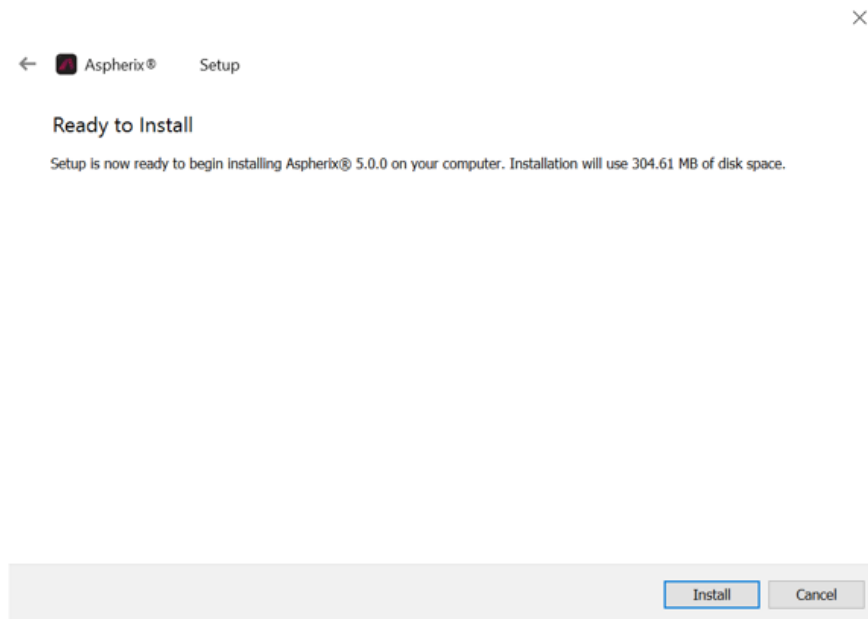


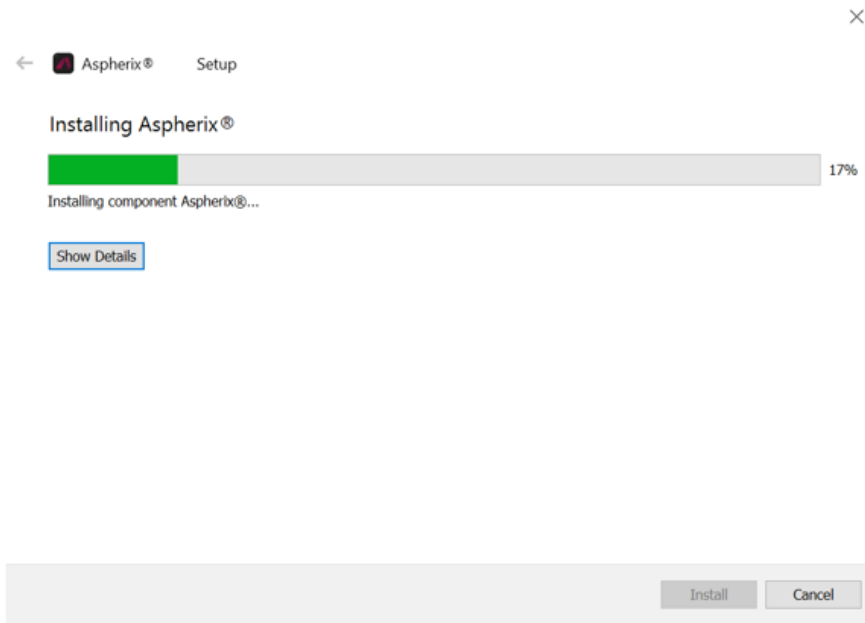


Under Windows, it is possible that a firewall warning appears during the installation process. This is because Aspherix® establishes contact with the license server to check the validity of the provided license file.

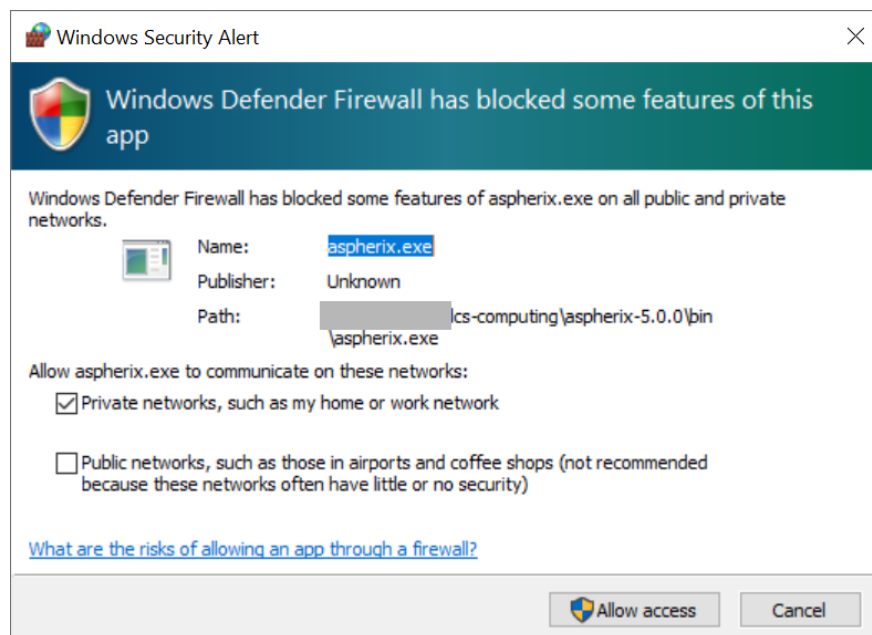

Under Windows Microsoft MPI is installed at that time as well. In case an older version is already installed, you will be asked to update to the delivered one, in case a later version is found an error message will pop up:

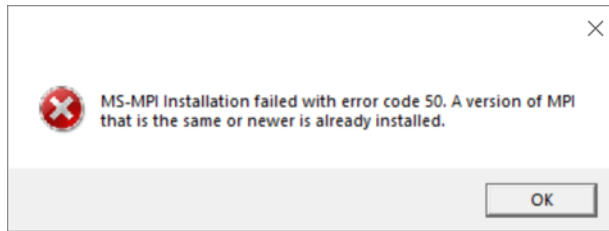


Now the installation is complete and Aspherix® is ready to go.

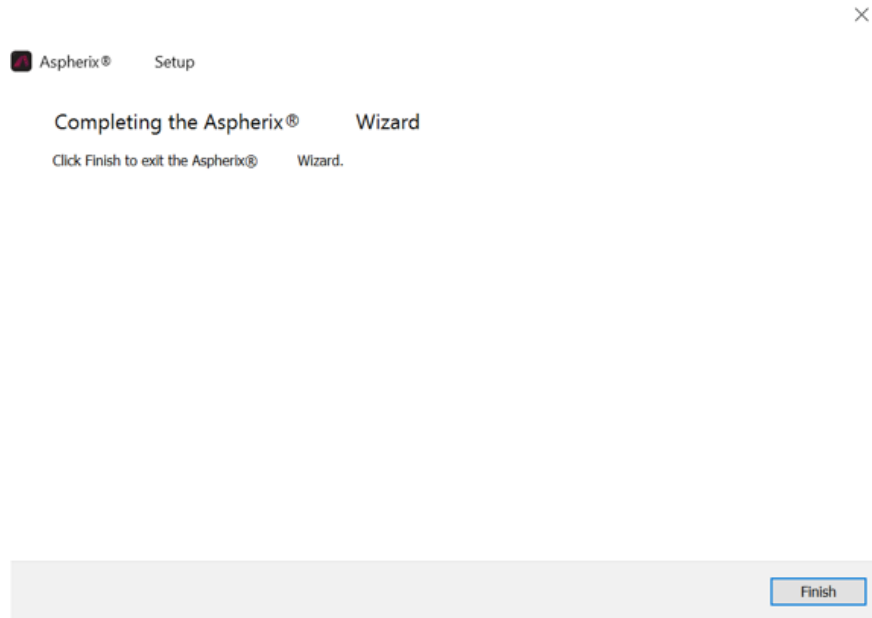

4 Uninstallation

To uninstall Aspherix®, launch the Aspherix_InstallManager (Aspherix_InstallManager.exe on Windows) in the Aspherix® installation folder. The following window appears:

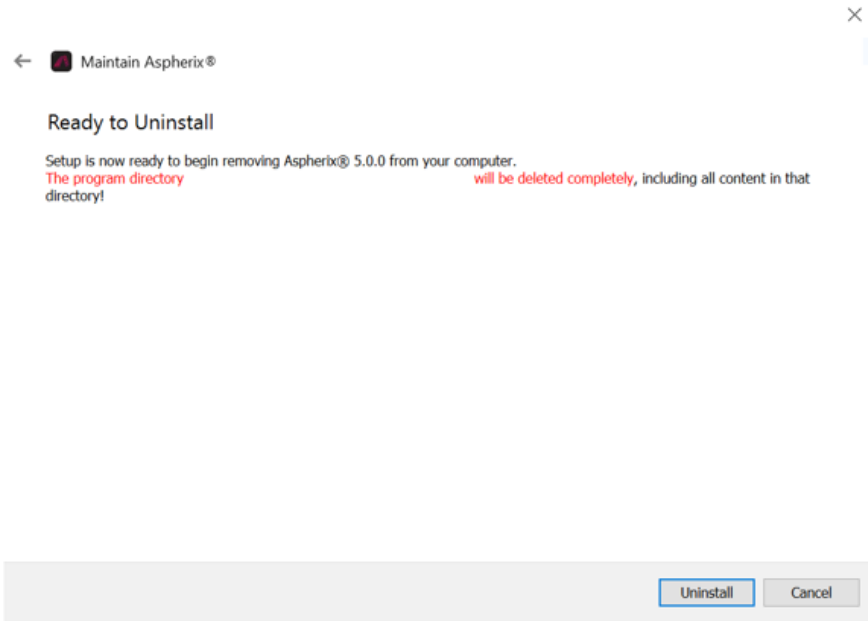


Click “Uninstall” to perform the uninstallation.

5 Installation of Salome

Salome is an open source software that can be used for the generation of CAD geometries and meshes for numerical simulations. It can be downloaded and used for free:

<https://www.salome-platform.org/downloads/current-version>

There are installers for Windows and many Linux distributions. For making Salome usable from within Aspherix® GUI please set the correct path in File/Options:

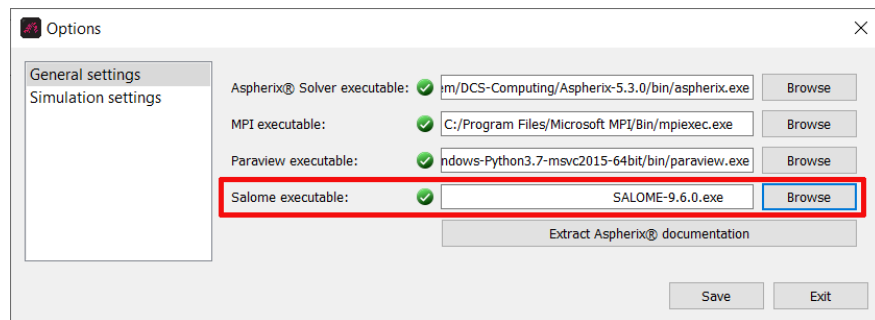

6 Text based installation

Aspherix® solver can also be installed without the graphical user interface using the provided installation script. This is useful on systems where no desktop environment is installed (eg. clusters). To perform the installation in interactive mode, run

```
$ ./AspherixInstallScript_6.6.sh -i
```

Alternatively, the necessary information can be provided to the script using command line options. Run

```
$ ./AspherixInstallScript_6.6.sh -h
```

to see a list of available options.

Note: The Aspherix® solver installer needs to be in the same directory as the installation script

Note: You may have to modify the permissions of the file to make it executable. Run

```
chmod a+x AspherixInstallScript_6.6.sh
```

to do so.

Description of the command line options

```
$ AspherixInstallScript_6.6.sh
```

Script for text-based installation of Aspherix-6.6

flags:

```
-i          enable interactive mode, flag, default false
-d PATH    installation Directory, path, default $HOME/
→DCS-Computing/Aspherix-6.0.0/
-c          also install the calibration modules, default false
-g          also install the GUI modules, default false
-l LICFILE path of license file ending with .lic. This path must
→be absolute!
-p DEMOPW  demo password, string, default
-s          install system wide, requires sudo privileges, flag,
            invokes -r , default no
-r          disable use default paths relative to the installation
→directory instead of config files,
            flag, default false
-u          link to /usr/local directory, flag, default no
-U PATH    usr library directory, path, default /usr/local/lib/
-D          enable documentation and example extraction, flag,
→default false
```

```

    -e          set environment in .profile and .bashrc, flag, default,
↪no
    -Y          accept all license agreements of all selected packages,
↪default false
    -h          display this text

```

The options are described in greater detail below. Please also refer to the graphical installation above for further details and for comparison.

- *-i*: Interactive mode which queries the user on each option via text based input.
- *-d PATH*: Path into which Aspherix will be installed in.
- *-c*: If present, Aspherix Calibration will be installed and its templates will be unpacked. Note, the latter requires the correct license files and demo password (if applicable).
- *-g*: If present, Aspherix GUI will be installed.
- *-l LICENSE*: Path to a license file ending with *.lic* that was provided to you by DCS Computing. This path must be absolute!
- *-p DEMOPW*: The demo password that you should have received from DCS Computing.
- *-s*: Install the package configuration system wide, so that it is available for all users. Note, this requires running this script with root privileges.
- *-r*: Install the package configuration for the current user (if *-s* is not set). If this flag is not set the configuration will be written into a subfolder of *PATH* specified by *-d* and will be accessible for all users of that installation.
- *-u*: Link Aspherix executable to */usr/local/bin* and place libraries into either */usr/local/lib* or the path provided by *-U*.
- *-U PATH*: If *-u* is set, Aspherix libraries will be linked to the specified *PATH*.
- *-D*: If set, the installer will extract the documentation for the Aspherix toolbox and the examples. Note, this requires the correct license files and demo password (if applicable). If this is not yet available this can be performed after the installation by running *aspherix -re*.
- *-e*: Set environment variables into the current user's *.profile* and *.bashrc* files so that the installation information is passed to the corresponding environment variables like *\$PATH*.
- *-Y*: Accept, without further prompt, the license agreements and EULAs of all selected packages.
- *-h*: Display the help text that is shown in the box above.

If you wish to review the installation or resolve an error then check the *InstallationLog.txt* file that is in your Aspherix installation folder. This file lists in detail any errors and provides some verbose output of the performed installation procedures.

Dependencies of the installer

Even though the installer can work without a graphical user interface, it still has dependencies to some graphics-related libraries. If an error similar to

```
./Installer-Aspherix_Linux_6.0.0: error while loading shared libraries:
↳ libxcb-glx.so.0: cannot open shared object file: No such file or
↳ directory
```

appears during installation, some of these libraries might be missing. The full list of dependencies is

- *libxcb-glx.so.0*
- *libX11-xcb.so.1*
- *libXrender.so.1*
- *libXext.so.6*
- *libX11.so.6*
- *libxkbcommon-x11.so.0*
- *libGL.so.1*

On an Ubuntu system, these dependencies can be installed via

```
sudo apt-get install libx11-6 libx11-xcb1 libxcb-glx0 libxrender1
↳ libxkbcommon-x11-0 libxext6 libgl1
```

On CentOS, the installation command looks like

```
yum install fontconfig libx11 libxcb mesa-libGL libxkbcommon libxkbcommon-
↳ x11
```

Depending on the exact version of the system, the package names can also slightly differ.

7 Testing your installation

After completing the installation you might want to test your installation. To check the version of your fresh install you can run

```
aspherix -version
```

which should show an Output similar to

```
Aspherix (Version Aspherix 6.6.0, compiled 2025-03-12-13:20:23 by vagrant,
↳ git commit 3efa378ae0fe305d4e235e2e5c66d2244884a712)
```

Note: Note, if the executable is not in your PATH environment variable you might need to explicitly call it using

```
cd /path/to/Aspherix/Installation  
bin/aspherix -version
```

Please verify the version number and that it corresponds to the one of the installer.

Since the previous command does not use a license manager the next step is a test that checks for a valid license. To do so start Aspherix without any arguments, i.e.

```
aspherix
```

which should show an Output similar to

```
Aspherix (Version Aspherix 6.6.0, compiled 2025-03-12-13:20:23 by vagrant,  
→ git commit 3efa378ae0fe305d4e235e2e5c66d2244884a712)  
RLM license checkout path for feature 'asx_solver' called from  
→ 'Aspherix(R) solver': /path/to/Aspherix/Installation/share/aspherix/  
→ license.lic
```

The program will then wait for your input and to test it you can enter

```
print "test"
```

which should be followed by *test* appearing on the next line. The program can be exited by entering the *quit* command. The full output then would look similar to the following:

```
Aspherix (Version Aspherix 6.6.0, compiled 2025-03-12-13:20:23 by vagrant,  
→ git commit 3efa378ae0fe305d4e235e2e5c66d2244884a712)  
RLM license checkout path for feature 'asx_solver' called from  
→ 'Aspherix(R) solver': /path/to/Aspherix/Installation/share/aspherix/  
→ license.lic  
print "test"  
test  
quit
```

If this works your installation is ready for your first simulation. To get started try out the example found in *examples/solver/basic/chute_wear*. You can run it with

```
# Linux:  
mpirun -np 4 aspherix -in chute_wear.asx  
# Windows:  
mpiexec -np 4 aspherix.exe -in chute_wear.asx
```

And the output at the end should resemble the following

```
1 100000 811 0.044424213 0.0081736165
→1658682
Loop time of 12.1986 on 4 procs for 99999 steps with 811 atoms, finish
→time Fri Mar 12 13:20:23 2025

Pair time (%) = 0.345505 (2.83235)
Neigh time (%) = 1.35206 (11.0837)
Comm time (%) = 0.450405 (3.69228)
Outpt time (%) = 2.72746 (22.3588)
Wall time (%) = 1.64436 (13.48)
Coupl time (%) = 0 (0)
Other time (%) = 5.67878 (46.5528)

Nlocal: 202.75 ave 330 max 0 min
Histogram: 1 0 0 0 0 0 0 2 0 1
Nghost: 18 ave 38 max 0 min
Histogram: 1 0 1 0 0 0 1 0 0 1
Neighs: 126.5 ave 235 max 0 min
Histogram: 1 0 1 0 0 0 0 0 1 1

Total # of neighbors = 506
Ave neighs/atom = 0.623921
Neighbor list builds = 2121
Dangerous builds = 0
```

Note, due to performance differences the numbers shown above might differ to the ones you might obtain. At this point we can confidently say that your installation was successful.

8 Upgrading to a newer version of Aspherix®

Currently only one version of Aspherix® can be installed on a system at once. If you want to upgrade to a newer version, please uninstall the old version (see section Uninstallation) and install the new version (see section Installation).

9 License management

Independently of the purchased number of coins Aspherix® can be installed on an arbitrary number of machines. The coins only restrict the number of parallel usage of the products. A continuous contact to a license server is required. The connection is checked every 100 seconds, and if 4 connection checks fail, Aspherix® shuts down automatically. Depending on the product you are using, the license server has to be reached via the internet or within your company's intranet.

9.1 Online license server

For running Aspherix® with an online license server, the user only requires a license file and in some cases a password.

The license server is hosted at an online server. For a successful connection both port 5053 and a second, server-dependent port have to be accessible at server ls61.rlmcloud.com (please have a look at the troubleshooting section regarding connectivity checks). A constant, stable internet connection is required throughout the usage of any Aspherix® product. Short interruptions may be tolerated, but they must not exceed 400 seconds.

9.2 In-house license server

For running Aspherix® with an in-house license server, the user has to install a license server on a local machine which requires a setting and a license file. The license file also needs to be used when activating the local installations of the Aspherix® products within the network.

The in-house server needs to be hosted on a machine that is accessible by any device on which an installation of Aspherix® is installed. The connection to the license server has to be stable. Ports used for communication with the license server can be changed by the IT and must be set accordingly in the license file. For further informations check the *instructions* shipped with the server application. Short interruptions may be tolerated, but they must not exceed 400 seconds.

Note: Usually an in-house server uses *three ports*. One is for the optional web-service, the other two are essential for the communication between Aspherix® and the license server.

Note: The license server can broadcast, thus users can find a valid license as a last resort, if all the normal methods to find the server fail. This is enabled by default. **Most company IT departments will want to disable this functionality, by using the server switch “-noudp”**

10 Troubleshooting

In this section we have collected a few situations that can occur during installation and usage and their resolution. If you are experiencing any other issues please do not hesitate to contact us (e.g., via aspherix@dcs-computing.com). In case the issues are experienced during the installation, please always attach the installation log file (InstallationLog.txt in your installation folder).

Testing connectivity to the license server

Aspherix® needs to be able to connect to the license server. To test connectivity, the following commands might be useful:

Linux:

```
ping my-server.address  
nmap -PS my-server.address -p 5053  
telnet my-server.address 5053
```

Windows Powershell:

```
ping my-server.address  
Test-NetConnection my-server.address -Port 5053
```

The license server address and the used ports can be found in the license file.

License activation fails

Problem description: The installation process starts normally but is interrupted by an error-message that reports an issue with the license (E.g., “Could not check out XXX license as communication with the license server failed. Make sure that both RLM ports can be reached from your machine.” or “License server does not support this product” or “Error during checkout of license”).

Cause: connection to the license server could not be established due to lacking internet connection or closed ports.

Measures:

1. Reading the output:

- Should you get the error message: “Could not check out XXX license as communication with the license server failed. Make sure that both RLM ports can be reached from your machine.”. Then, Aspherix will automatically attempt to verify that the required ports are available.
- You should see at least one status line saying “Detecting ports in XXX.” followed by the server designation of that license file.
- Aspherix will find at least one of the two RLM ports and you will see a line starting with “Testing Port: YYYY”.

- If this is followed by the word “Success” then the corresponding port is available.
- If this is followed by “Error: Could not connect after 3 attempts” this port is closed and you or your IT department must open it up.
- If Aspherix can only detect one of the two ports you will see a message stating: “Could not detect both ports in this file.” In this case you must test the second port manually as demonstrated below.

2. For online licenses:

- Make sure that the computer is connected to the internet.
- Check if the online license server can be reached through port 5053. Use the following command: - on Windows: in the PowerShell type

```
Test-NetConnection ls61.rlmcloud.com -Port 5053
```

- on Linux: depending on the availability of the tools on your system, type either

```
nmap -PS ls61.rlmcloud.com -p 5053
```

or

```
telnet ls61.rlmcloud.com 5053
```

to a terminal.

3. For inhouse-license servers:

- Please contact your IT department and make sure that the required ports (per default 5053, 5054 and a third random port) are open. Keep in mind that the ports can be changed by the IT and must be set accordingly in the license file.
- For the network connectivity tests the name/address of the internal license server has to be used.

Installer does not start (Windows)

Problem description: double-clicking on the installer does not launch the installation process.

Cause: On “fresh” Windows systems it is likely that redistributables are still missing.

Measures: Please install both 32 and 64 bit redistributables for visual studio 2015-2022:

<https://docs.microsoft.com/de-DE/cpp/windows/latest-supported-vc-redist?view=msvc-170#visual-studio-2015-2017-2019-and-2022>

https://aka.ms/vs/17/release/vc_redist.x86.exe

https://aka.ms/vs/17/release/vc_redist.x64.exe

Installation error – Execution fails with aspherix -re

Problem description: The installation process starts normally but is interrupted by an error message stating “Error during installation process (com.dcscomputing.aspherix): Execution failed (Unexpected exit code 1): “[some path]/aspherix.exe -re”

Cause: the documentation could not be unpacked, Aspherix® Solver (and if included also Aspherix®GUI) were installed correctly.

Measures: please carry on with the installation process and once completed, open a PowerShell. Run aspherix with the flag -re (e.g., by typing the command displayed between the two commas in the error message.

This problem can also arise if there are two or more license files in the same folder. In this case, move the unused license files to another location.

Installation error – Execution fails with msmpisetup.exe (on Windows)

Problem description: The installation process starts normally but is interrupted by an error message stating “Error during installation process (com.dcscomputing.aspherix): Execution failed (Unexpected exit code [some number]): “[some path]/msmpisetup.exe”

Cause: some anti-virus software tools block the execution of the Microsoft installer of MS MPI.

Measures: if possible, please switch off the anti-virus software, un- and re-install Aspherix®.

Installation error - Unpacking of Aspherix Calibration templates fails

Problem description: The following error message pops up during the installation: “Error during installation process (...): .../aspherix_calibration extract_templates -license_path ...”

Cause: No Aspherix Calibration license is available but Aspherix Calibration is selected for installation (default setting).

Measures: if Aspherix Calibration has not been purchased, this error message can be ignored. If Aspherix Calibration should be available please contact DCS Computing.

This problem can also arise if there are two or more license files in the same folder. In this case, move the unused license files to another location.

Aspherix® GUI starts but the simulation cannot be launched (Aspherix® GUI only)

Cause 1: Aspherix® GUI finds the license file correctly but Aspherix® Solver does not. Measures: Please open a terminal (Linux) or a PowerShell (Windows) and configure aspherix with the following command:

```
aspherix -configuration user -lp [path to the license file] -dp [demo_
→password]
```

Please note that the option -dp is only required when using a demo version. Customers with the own online license server or inhouse server do not need it.

Cause 2: There are no Aspheri® Solver coins left because they are all currently in use. Measures: Please check if you or another user in your institution is running simulations. If the number of

running processes is equal to the available number of Aspherix® Solver coins you will have to wait until coins are available. This case is indicated by a coin-checkout error message in the simulation log window.

Cause 3: The license for Aspherix® Solver is expired while the license for Aspherix® GUI is still valid. Measures: In this case please contact us (e.g., via aspherix@dc-computing.com).

Aspherix® GUI cannot be launched with OpenGL errors

On Linux make sure an OpenGL library (version 3.2 or higher) is installed on the system.

- Debian variants: libopengl0
- RHEL/CentOS variants: libglvnd-opengl

On systems without hardware acceleration and proper drivers, as on virtual machines, the following startup command might be useful to ensure proper rendering:

```
LIBGL_ALWAYS_SOFTWARE=1 MESA_GL_VERSION_OVERRIDE=3.2 ./aspherix-gui
```

Windows needs adequate graphics acceleration, since it natively only supports very old OpenGL versions.

Graphics preview in Aspherix® GUI does not show anything

On Linux make sure an OpenGL library (version 3.2 or higher) is installed on the system.

- Debian variants: libopengl0
- RHEL/CentOS variants: libglvnd-opengl

On systems without hardware acceleration and proper drivers, as on virtual machines, the following startup command might be useful to ensure proper rendering:

```
LIBGL_ALWAYS_SOFTWARE=1 MESA_GL_VERSION_OVERRIDE=3.2 ./aspherix-gui
```

Windows needs adequate graphics acceleration, since it natively only supports very old OpenGL versions.

Aspherix® GUI cannot be launched on multi-gpu systems

On multi-gpu systems Aspherix® GUI may crash due to conflicts between different GLX versions.

For instance, you may get error messages like

```
qt.glx: qglx_findConfig: Failed to finding matching FBConfig for QSurfaceFormat(version 2.0, options QFlags<QSurfaceFormat::FormatOption>(), depthBufferSize -1, redBufferSize 1, greenBufferSize 1, blueBufferSize 1, alphaBufferSize -1, stencilBufferSize -1, samples -1, swapBehavior QSurfaceFormat::SingleBuffer, swapInterval 1, colorSpace QSurfaceFormat::DefaultColorSpace, profile QSurfaceFormat::NoProfile) Could not initialize GLX
```

To resolve this problem the following startup command tries to enforce the correct environment

```
QT_OPENGL=software LIBGL_ALWAYS_SOFTWARE=1 MESA_GL_VERSION_OVERRIDE=3.2.1  
→QT_XCB_GL_INTEGRATION=xcb_egl ./aspherix-gui
```

Paraview cannot be launched from within the GUI (Aspherix® GUI only)

Problem description: The simulation could be launched successfully, and output data should have been written to the drive already. Nevertheless, the “Start Paraview” button in the visualiation section remains inactive.

Cause: The path to the Paraview executable is unknown to Aspherix® GUI or Paraview has not been installed.

Measure: If paraview is installed on the machine, please open the Options dialogue (File/Options) and set the correct path. Once saved, the “Start Paraview” button will become active if simulation data is available. If paraview is not yet installed, please install it (this can also be done during the installation of Aspherix®).

Paraview cannot be launched

Problem description: The simulation could be launched successfully, and output data should have been written to the drive already. The “Start Paraview” button in the visualiation section is active but Paraview does not launch. (Mainly for Ubuntu 20.04, but can happen at other Linux OS as well).

Cause: libOpenGL.so(.0) is not available on the system.

Measure: Please go to the installation path of Paraview and check if it can launched via the terminal from there. If the library is missing, a correct error message will be displayed. Please install the missing library then.

Paraview cannot be launched (missing Curl)

Problem description: The simulation could be launched successfully, and output data should have been written to the drive already. The “Start Paraview” button in the visualiation section is active but Paraview does not launch. (Mainly for Ubuntu 18.04 and Paraview 5.10.1, but can happen at other Linux OS as well).

Cause: libcurl.so(.4) is not available on the system.

Measure: Please go to the installation path of Paraview and check if it can launched via the terminal from there. If the library is missing, a correct error message will be displayed. Please install the missing library (on ubuntu: libcurl4) then.

Paraview cannot be launched (missing Qt libraries)

Problem description: The simulation could be launched successfully, and output data should have been written to the drive already. The “Start Paraview” button in the visualiation section is active but Paraview does not launch. (Reported for Ubuntu 22.04 and 24.04 and Paraview 5.12.1 and 5.13.1).

Cause: ParaView does not ship all required libraries.

Package libqt5x11extras5 is not available on the system.

Measure: Please go to the installation path of Paraview and check if it can be launched via the terminal from there. Please install the missing library (on ubuntu: libqt5x11extras5) then.

Aspherix® GUI does not run stable in virtual machine (VM)

Problem description: Aspherix® GUI shuts down unexpectedly in VM.

Cause: The VM itself can trigger this behaviour when the option “Accelerate 3D Graphics” is activated.

Measure: Switch off “Accelerate 3D Graphics” option in settings of VM.

Aspherix® does not find libmpi* (OpenSUSE)

Problem description: Aspherix® does not find libmpi* on OpenSUSE.

Cause: OpenMPI is not added to the path automatically when installed.

Measure: Add OpenMPI to path manually.

Aspherix® does not find libmpi* and libmpich* (Amazon Linux 2023)

Problem description: Aspherix® does not find libmpi* and libmpich* on Amazon Linux 2023.

Cause: OpenMPI and mpich are not added to the path automatically when installed.

Measure: Add OpenMPI and mpich to path manually.

Aspherix® shadows system libraries (e.g. libgfortran*)

Problem description: Aspherix® fails execution due to library version incompatibility.

Cause: Due to the MPI agnostic implementation of Aspherix® system libraries may be shadowed by our deployed libraries.

Measure: Libraries are usually backward compatible. Remove our libraries.